

# MOUNTING YOUR TV


30kg  
MAX

32"  
MAX


You may require the following items that are not included:



The following mount components are included:


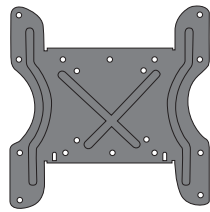


**A** 1 x TV mount

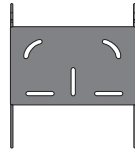

**B** 1 x wall mount

The following fixings are included:

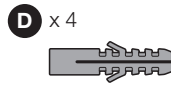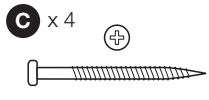

Before assembling and attaching your wall mount please read the **IMPORTANT** text listed overleaf. If you have any problems please call our customer helpline – (UK) 0800 1077812.

**1**





Attach the wall mount **B** to the wall using the supplied screws **C** and wall plugs **D**.

**2**

Attach the TV mount **A** to the back of the TV using the correct fixing for your TV (the supplied fittings are shaded grey above).


**3**

Hook the TV mount **A** over the wall mount **B** as shown above.

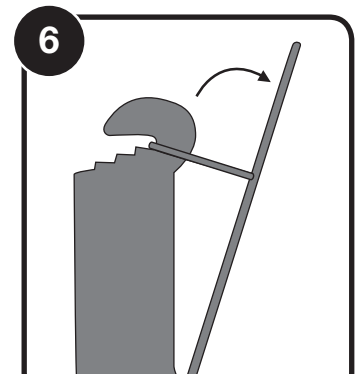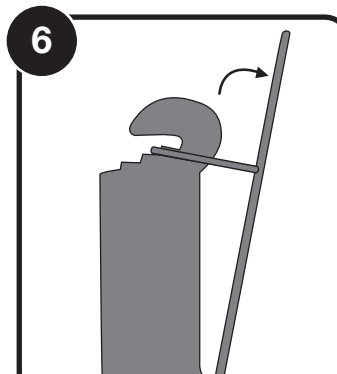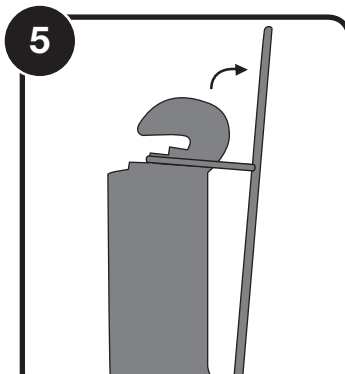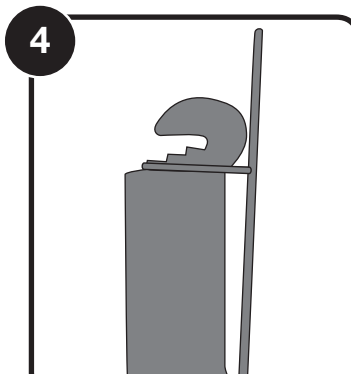

Your TV wall mount has four different positions as shown above. Move the TV mount **A** up the steps as shown to tilt your TV forward.

# A GUIDE TO WALL PLUGS AND FIXINGS

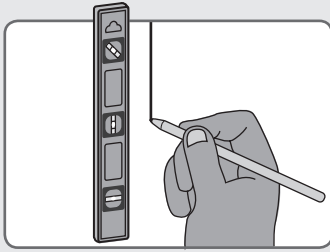


When attaching your wall mount use a spirit level to make sure that you are attaching it to the wall straight.

You can mark the wall with a pencil as shown, then drill the holes for your wall plugs in the required locations dependent on your mount.


## Choosing the correct plug for your wall:

### Standard wall plug (supplied)

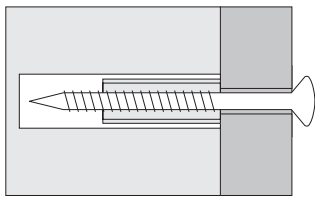


The provided wall plugs are suitable for most solid walls up to the weight specified at the top of the page overleaf.

### Aerated/Breeze block wall plug

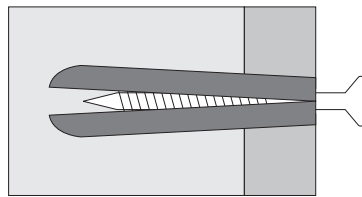

Generally aerated blocks should not be used to support heavy loads, however, if attaching your wall mount to an aerated block wall please use a specialist plug and be sure to check to ensure the plug is appropriate up to the weight of your TV (including your wall mount).

### Shield anchor

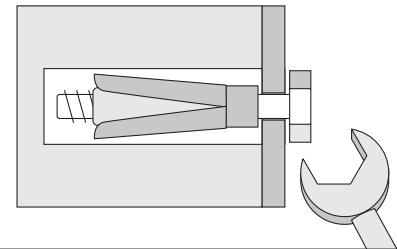

Shield anchors are designed for heavy loads, you may want to use shield anchors in place of the supplied plugs and screws if your wall is older or has begun to decay in any way. If you are not sure about the suitability of your wall please check with a qualified tradesman.

## HINTS:

- 1 Always use a larger screw and wall plug if you are not sure.
- 2 Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3 Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4 Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
- 5 Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## IMPORTANT

- DO NOT attach your TV mount onto plaster board or other hollow walls unless all plugs are screwed into a structural batten or stud.
- When drilling into walls always check that there are no hidden wires or pipes etc.
- Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.
- Ensure all fittings are tightened before and after mounting the screen.
- From time to time check the fitting to ensure the wall plugs or screws do not become loose.

If you have any problems please call our **customer helpline – (UK) 0800 1077812.**